



control solutions

TERACOM



TCW210-TH Temperature and humidity data logger

Revision 1.0 / May 2017

USER MANUAL

1. Introduction

TCW210-TH is a temperature and humidity data logger with an embedded WEB server. Real-time data and charts of temperature, humidity and dew point can be monitored with a standard web browser (no special software is needed). Standard protocols as SNMP, MODBUS/TCP, and HTTP/API are also available for M2M applications. The device supports also interface to popular IoT analytics – ThinkSpeak.

The Ethernet temperature logger supports up to eight Teracom temperature or temperature/humidity sensors. All they can be connected either to the 1-Wire interface, popular for home automation or to more robust industrial RS-485.

All monitored parameters can be recorded, in internal FLASH memory. The records are made on the previous set time interval and/or on an alarm condition. The memory is large enough for at least 36 days with records on every minute. The log file can be periodically uploaded on a dedicated server by HTTP Post.

For every monitored parameter e-mails and SNMP traps for up to 5 recipients can be sent. Alarm alert can also be sent by HTTP Post with XML/JSON status files.

2. Features

- Data logger for up to 70000 records;
- 1-Wire and RS-485 interfaces for up to 8 temperature (TST1XX/TST3xx) or temperature/humidity (TSH2xx/TSH3xx) sensors;
- HTTP API commands;
- Periodical HTTP Post of XML/JSON status files for client-server systems;
- SNMP v.2 support;
- SNMP traps to up to 5 recipients like alarm alert;
- MODBUS TCP/IP support;
- SMTP with TLS authentication;
- e-mails to up to 5 recipients like alarm alert;
- ThinkSpeak service support;
- NTP support;
- Back-up/Restore of configurations;
- Dynamic DNS support;
- 10/100 Mb Ethernet connectivity;
- Auto-MDIX;
- Port changing for HTTP, SNMP and MODBUS;
- Password protected web based configuration and control;
- Extended working temperature range;
- Wide power supply voltage range;
- Remote firmware update.

3. Applications

TCW210-TH is suitable for environmental monitoring, building, and industrial automation.

It works very well for monitoring temperature and humidity as a standalone device using a web browser only or as a part of small to large industrial control systems for SCADA (supervisory control and data acquisition).

A few application example - pharmaceutical and food processing and storage, clean rooms, laboratories, HVAC systems, greenhouses and farms, electronic assembly etc.

4. Technical parameters

Supply voltage, VDC	10 - 32
Maximum current, mA	170@12VDC
Weight, g	140
Dimensions, mm	130 x 70 x 30
Operating temperature, °C	-20 to +55
Maximum humidity, %RH	70
Supply voltage for 1-Wire bus, VDC	5.0 ± 0.3
Supply voltage for RS-485 bus, VDC	5.0 ± 0.3
Maximum output current for 1-Wire and RS485 buses, A	0.2

5. LED indicators

The following indicators show the status of the controller:

- **PWR** (red) – in working mode shines, blinks together with STS if there is a hardware error;
- **STS** (yellow) – flashes when the main program of the controller is executed.

6. Installation and setup

This device must be installed by qualified personnel.

This device must not be installed directly outdoors.

The installation consists of mounting the device, connecting to an IP network, connecting inputs and outputs, providing power and configuring via a web browser.

6.1. Mounting

TCW210-TH should be mounted in a clean and dry location on a not flammable surface. Ventilation is recommended for installations where ambient air temperature is expected to be high.

Maintain spacing from adjacent equipment. Allow 50 mm of space on all sides, as shown in fig.2 in Appendix A, this provides ventilation and electrical isolation


6.2. Connection

Attention! Disconnect power supply before wiring.

The correct wiring procedure is as follows:

- Make sure power is turned off;
- Apply all sensors;
- Apply power.

Make sure that cables are properly attached. Not proper wiring and configuration can cause permanent damage to TCW210-TH or the equipment to which it is connected or both.

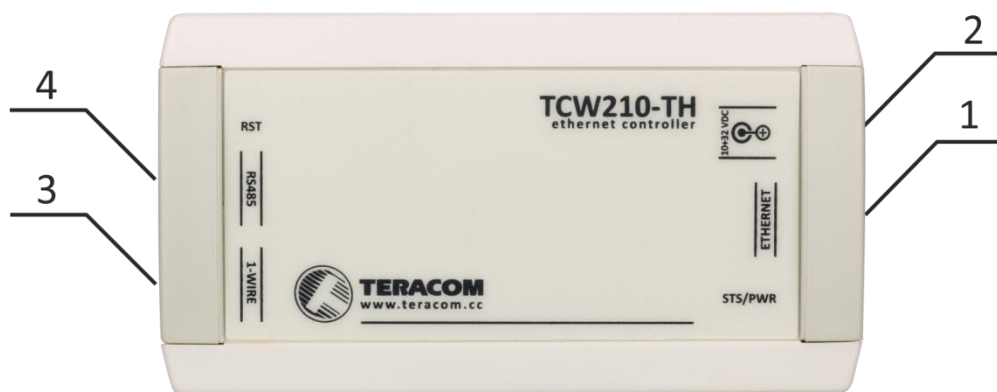

Connector 1	Ethernet - RJ45	Connector 4	Pin1 – +VDD (most left)
Connector 2	Power - central positive		Pin2 – +VDD
Connector 3	Pin1 – GND (most left)		Pin3 – GND
	Pin2 – GND		Pin4 – not connected
	Pin3 – 1-Wire Data		Pin5 – not connected
	Pin4 – 1-Wire GND		Pin6 – GND
	Pin5 – +VDD		Pin7 – Line A
	Pin6 – +VDD (most right)		Pin8 – Line B

6.2.1. Power supply

TCW210-TH is designed to be supplied by adapter SYS1421-0612-W2E or similar, intended for use in the conditions of overvoltage category II, and prior assessed for compliance with safety requirements. The power supply equipment shall be resistant to short circuit and overload in a secondary circuit.

When in use, do not position the equipment so that it is difficult to disconnect the device from the power supply.

6.2.2. 1-Wire interface

1-Wire is a registered trademark of Maxim Integrated Products, Inc. It is designed to connect several sensors over a short wiring. It is not suitable for long distances or environments with EMC interference.

The maximum number of connected to TCW210-TH sensors (1-Wire or RS-485) is 8.

The device supports temperature and temperature-humidity sensors. Connected sensors are automatically detected and appropriate dimension is assigned.

It is strongly recommended to use “daisy-chained” (linear topology) for multi-sensors systems:



It is strongly recommended to use only UTP/FTP cables and keep total cable length up to 30m. Although functionality has been achieved in the longer distance, we cannot guarantee error-

free operation over mentioned wiring length. We recommend reading Maxim's 1-Wire tips at <http://www.maxim-ic.com/app-notes/index.mvp/id/148>.

We guarantee proper operation only with Teracom 1-Wire sensors.

6.2.3. RS-485 interface

RS-485 is a standard for serial communications systems defined by Telecommunications Industry Association (TIA) and Electronic Industries Alliance (EIA). Implementing the standard, communication systems can be used effectively over long distances and in electrically noisy (industrial) environments.


The maximum number of connected to TCW210-TH sensors (RS-485 or 1-Wire) is 8.

The device supports temperature and temperature-humidity sensors. Connected sensors are automatically detected and appropriate dimension is assigned.

For multi-sensors systems "daisy-chained" (linear topology) should be used:



Interconnections are realized by UTP/FTP cables with RJ-45 connectors. The popular Ethernet wiring standard ANSI/TIA/EIA T568B is used:

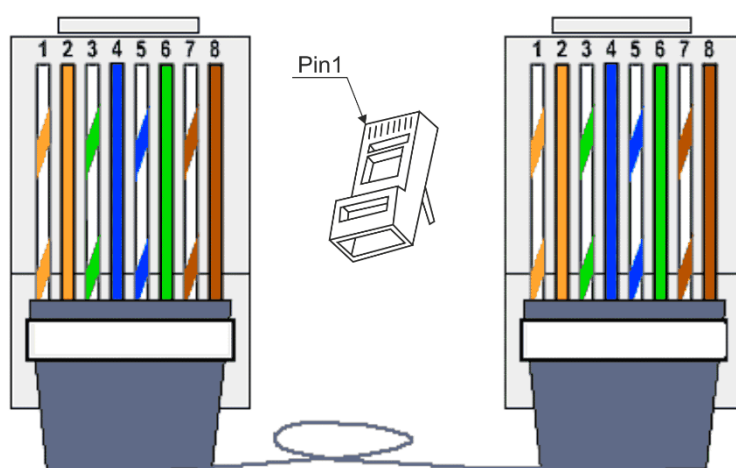

Pin#	RJ45
1	Orange/White Tracer
2	Orange
3	Green/White Tracer
4	Blue
5	Blue/White Tracer
6	Green
7	Brown/White Tracer
8	Brown

It is recommended to use standard patch cables for LAN networks.

Special attention should be paid on termination of the bus in the last sensor.

We recommend keeping total cable length up to 30 m, although the RS-485 interface works over much longer distance.

Attention!

Special attention should be paid on termination of the bus.

The last sensor in the chain should have a terminator installed on the free RJ-45 socket.

Network connection

The Ethernet port of TCW210-TH should be connected to 10/100 Base-T Ethernet hub, switch or router.



For setup, TCW210-TH may be connected directly to the Ethernet port on a computer. The device support Auto-MDIX and it is not necessary to use “crossover” cable, standard “straight-through” can be also used.



TCW210-TH can be used in a wireless network by connecting through a wireless router.




6.3. Communication setup


By default TCW210-TH is delivered with the following network settings:

IP address: 192.168.1.2, Subnet Mask: 255.255.255.0, Default Gateway: 192.168.1.1


Communication with TCW210-TH can be established by assigning a temporary IP address to the computer. For computers with Windows OS assigning of IP address is made in “Local area connection properties”:

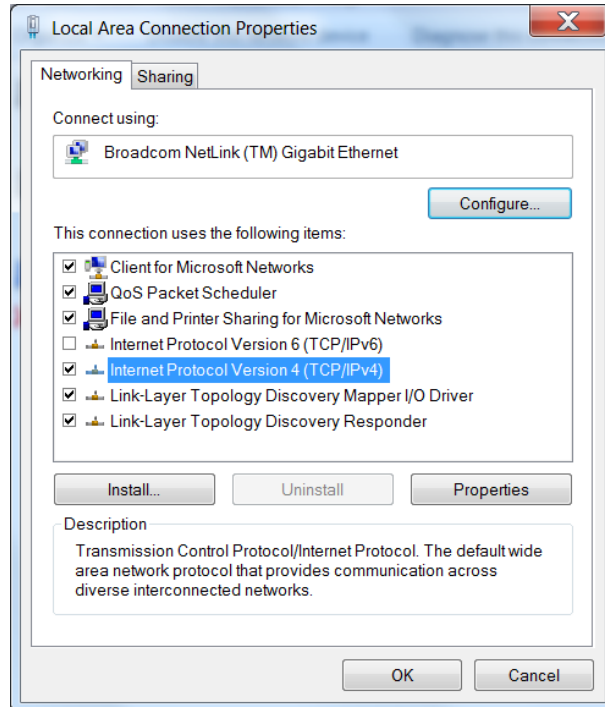


The address should be on the same network - for example 192.168.1.3:

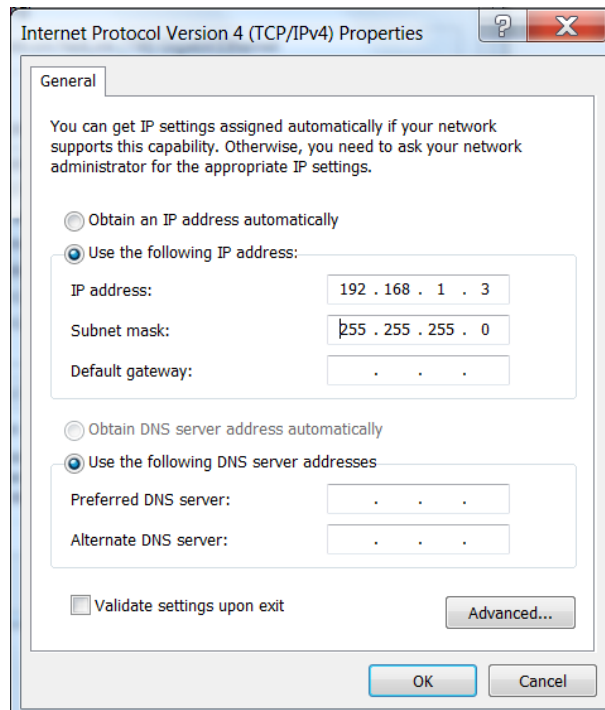

To get access to the web interface, you should type <http://192.168.1.2> into the browser:

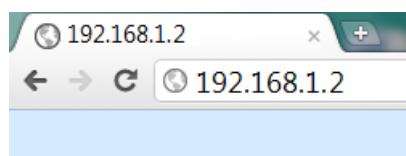

If the network settings are correct, the login pop-up window will appear:

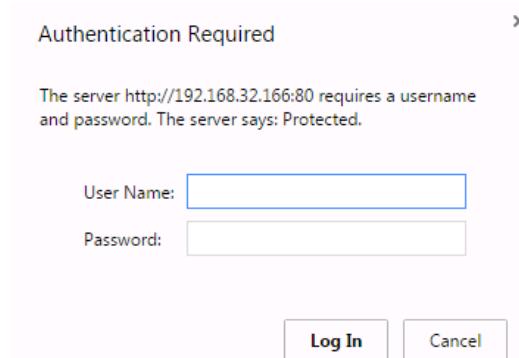A screenshot of a web browser's authentication pop-up window. The window has a title bar that says "Authentication Required" with a close button (X) on the right. The main text inside the window reads: "The server http://192.168.32.166:80 requires a username and password. The server says: Protected." Below this text are two input fields: "User Name:" followed by a text box, and "Password:" followed by a password box. At the bottom of the window are two buttons: "Log In" and "Cancel".

All TCW controllers connected to LAN can be easily found by free tool “TCW discoverer”.

It is available for Win and Mac operating systems and can be downloaded from www.teracomsystems.com.

7. Web interface

The web interface allows configuration, monitoring, and control. All pages are UTF-8 encoded.

If the controller is properly addressing, login pop-up window appears.

Authorization data must be entered (by default username=admin, password=admin).

It is recommended to change the username and password to prevent unauthorized access to the controller.

The controller supports a few active session.

7.1. Monitoring

Monitoring page displays the current state of TCW210-TH.

The page has one section – “Sensors”. For every sensor, there is a description of up to 15 characters. Default ones can be changed in “Setup-Input/Output”.

The Monitoring page can be automatically refreshed on an interval of 0 to 253 seconds. Zero means no automatic refresh. This parameter is set in section “Setup-System-Monitoring page automatic refresh”. By default, it is 1 second.

7.1.1. Data

The current state of TCW210-TH can be monitored on this page.

All detected 1-Wire/RS-485 sensors are shown in this section.

Detection is made either after power on or by button “Scan for new sensors”. All found sensors are shown in ascending order refer their unique ID number.

For every sensor, there are a description, value, and ID information. The description length is up to 15 characters. Default descriptions can be changed in “Setup-Conditions”.

The value of temperature sensors is shown in the Value 1 column.

Dual sensors (temperature/humidity) have the 2-nd parameter. It is shown in the Value 2 column. For this sensor Dew point parameter is calculated automatically.

It is possible to lock sensors in a specific position. To do this all sensors should be added one by one. After every addition, a new scan should be made and newly found sensor should be locked in its position. If all sensors are locked, removing one “in the middle” will not change the positions of other sensors after reset. This option is very useful when TCW210-TH is used as a part of monitoring and control system managed either by SNMP or HTTP API commands.


The Monitoring page can be automatically refreshed on an interval of 0 to 253 seconds. Zero means no automatic refresh. This parameter is set in section “Setup-System-Monitoring page automatic refresh”. By default, it is 1 second.

Pos	Description	Temperature	Humidity	Dew point	ID	Type	Lock
1	S1:TST1xx	17.8 °C	-----	-----	[2867895F07000058]	1Wire	<input checked="" type="checkbox"/>
2	S2:TSH2xx	17.6 °C	42.1%RH	4.6 °C	[01D01FB71700FFF8]	1Wire	<input checked="" type="checkbox"/>
3	S3:TSH3xx	17.4 °C	41.4%RH	4.2 °C	[1500502838FFFF84]	RS485	<input checked="" type="checkbox"/>
4	S4:TST3xx	17.4 °C	-----	-----	[33004F0956FFFF58]	RS485	<input checked="" type="checkbox"/>
5	S5:TST3xx	19.9 °C	-----	-----	[33004F0957FFFF3]	RS485	<input checked="" type="checkbox"/>
6	S6:TST3xx	17.5 °C	-----	-----	[33004F0958FFFFAC]	RS485	<input checked="" type="checkbox"/>
7	S7:TSH3xx	17.9 °C	41.2%RH	4.5 °C	[1500502F9AFFFFB8]	RS485	<input type="checkbox"/>
8	S8	-----	-----	-----	[0000000000000000]	---	<input type="checkbox"/>

Scan for new sensors

7.1.2. Graph

Every graph page can display up to 4 parameters with up to 2 different dimension.

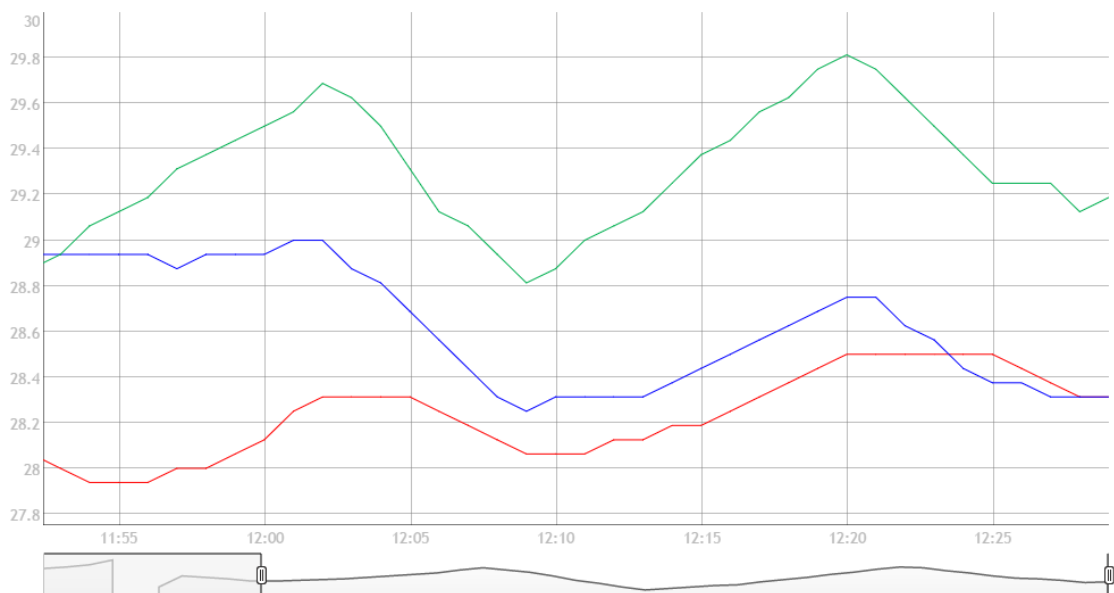

For every parameter different color can be set. There are a few check boxes for display modification.

Export of monitored parameters can be made from the page.

Graph Name
Graph-1

S1:TST1xx Temperature ■

S2:TST1xx Temperature ■

S3:TSH2xx Temperature ■

none ■

Save

Period
Last 12 hours

☐ Highlight alarm values
☐ Highlight series
☐ Highlight weekends

☒ S1:TST1xx Temperature
☒ S2:TST1xx Temperature
☒ S3:TSH2xx Temperature
☒ none

From

To

Export

7.2. Setup

7.2.1. Network

The network parameters are set on this page.

Network setup	
Hostname	TCW210TH
Static/DHCP	Static
IP address	192.168.32.167
Subnet mask	255.255.255.0
Default gateway	192.168.32.1
DNS	8.8.8.8
MAC address	D8:80:39:8E:34:23

SAVE

The controller supports static and dynamic IP addresses.

It is good practice to change the default IP address of controller immediately after first power-on. This will avoid collisions if many devices are used on the same network.

It may be necessary to clear the arp cache, each time you connect a new device to the network. This is done by typing *arp -d* in the command prompt window of the computer.

The “Host name” is up to 15 characters. It is shown in search results of TCW discoverer.

7.2.2. SMTP

This page is used to enter valid SMTP settings for email alerts and recipients’ addresses.

7.2.2.1. SMTP setup

SMTP setup	
Mail server IP/URL	smtp.mail.yahoo.com
Mail server port	465
Type of encrypted connection	TLS
Sender e-mail	teracom_test@yahoo.com
Username	teracom_test@yahoo.com
Password	*****

Test server settings

Mail server address can be set either by hostname (for example smtp.mail.yahoo.com) or by IP address.

By default, without encrypted connection, SMTP port is 25. Ask ISP if default port doesn’t work.

Sender e-mail, username, and password are standard authentication details. For most SMTP servers sender e-mail and username are the same.

There is a button for server settings test with a feedback. In this test sender and recipient of the e-mail is the same.

Transport Layer Security protocol is used for secure communication with public mail servers. The device supports – TLS 1.0, TLS 1.1 and TLS 1.2 with RSA_WITH_AES_128_GCM_SHA256 and RSA_WITH_AES_128_CBC_SHA cipher suites. This ensures successful operation with almost all public servers.

7.2.2.2. Alarm destination

Alarm destinations		
Recipient e-mail	info@teracom.cc	<input checked="" type="checkbox"/>
Recipient e-mail		<input type="checkbox"/>
Recipient e-mail		<input type="checkbox"/>
Recipient e-mail		<input type="checkbox"/>
Recipient e-mail		<input type="checkbox"/>

Test email

Up to 5 mail recipients can be set. All they can be activated independently by check box.

7.2.2.3. E-mail details

The subject, body header, body and body footer can be customized. For this customization, a set of keys is used. All they are described on the page.

Email details	
Subject	Att. to #C
Body header	From #N, located at #L
Body	#S,#D=#V#U in #T
Body footer	IP Address:#A, MAC Address:#M
Subject, header and footer variables	
#N System Name	#D Sensor Description
#L System Location	#V Measured Value
#C System Contact	#U Unit of measured value
#A IP Address of device	#T Time stamp of message
#M MAC address of device	#S Status of parameter-ALARM/NORMAL
#H Hostname	#I ID of message
	#W LoW limit
	#G HiGh limit

7.2.3. Conditions

This section is used for parameterization of trigger and alert conditions for 1-Wire/RS485 sensors.

Sensors							If out of range		
#	Description	Type	Min.	Max.	Hys.	Offset	mail	trap	post
1	S1:TST1xx	Temperature, °C	-40.0	25.0	0.5	0.00	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
	---	---	---	---	---		<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
	---	---	---	---	---		<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
2	S2:TSH2xx	Temperature, °C	-40.0	85.0	0.5	0.00	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
	Humidity, %RH		0.0	100.0	1.0	0.00	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
	Dew point, °C		0.0	25.0	0.5		<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
3	S3:TSH3xx	Temperature, °C	-40.0	85.0	1.5	0.00	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
	Humidity, %RH		0.0	100.0	1.0	0.00	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
	Dew point, °C		0.0	25.0	0.5		<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
4	S4:TST3xx	Temperature, °C	-40.0	85.0	1.5	0.00	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
	---	---	---	---	---		<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
	---	---	---	---	---		<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
5	S5:TST3xx	Temperature, °C	-40.0	85.0	0.5	0.00	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
	---	---	---	---	---		<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
	---	---	---	---	---		<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
6	S6:TST3xx	Temperature, °C	-40.0	85.0	1.5	0.00	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
	---	---	---	---	---		<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
	---	---	---	---	---		<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
7	S7:TSH3xx	Temperature, °C	-40.0	17.0	0.5	0.00	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
	Humidity, %RH		0.0	100.0	1.0	0.00	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
	Dew point, °C		0.0	25.0	0.5		<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
8	S8	---	---	---	---		<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
	---	---	---	---	---		<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
	---	---	---	---	---		<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>

Number of 1-Wire sensors of 8

Return notification ☐ Notification delay (seconds) (0-3600)

By default 1-Wire sensors are 8 while RS-485 sensors are not used. To use RS-485 sensors the number of used 1-Wire sensors should be reduced.

Number of 1-Wire sensors of 8

For every sensor, a description up to 15 characters can be set.

For all sensors “Offset” field is enabled. The offset is used for simple correction of displayed value.

For every parameter, there is a field for trigger conditions (“Min”, “Max” and “Hys.”).

“Min” and “Max” indicate the border of working range for the observed parameter.

A “Max” trigger condition occurs when the value exceeds the trigger set point. A “Min” trigger condition occurs when the value is lower than the trigger set point. In both cases, the monitored parameter goes out of range.

Coming back in range for the observed parameter is considered when the value goes higher than (Min + Hys) or lower than (Max – Hys). Hysteresis (“Hys”) is used to prevent from excessively triggering when the value vacillates around trigger point.

Example:

TCW210-TH and TST103 are used to monitoring of room temperature. The wanted minimum temperature is 19°C. The initial temperature is 17°C.

TST100 is assigned on the first position for 1-Wire sensors.


Following parameters are set for Sensor1: Min=19, Max=85 and Hys=0.5.

Sensors							If out of range		
#	Description	Type	Min.	Max.	Hys.	Offset	mail	trap	post
1	S1:TST1xx	Temperature, °C	19	85	0.5	0.00	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>

When the controller is switched on, Alarm is immediately activated because the monitored temperature is out of range.

When the temperature reaches 19.5°C (19.0 + 0.5) it goes in range (trigger condition) and Alarm is deactivated.

The temperature falls and when it reached 19°C it goes out of range (trigger and alert conditions). E-mail is sent.

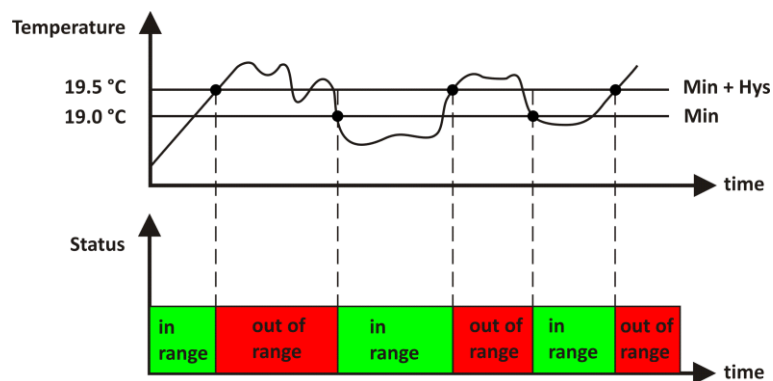


The “Max” value is set far enough from the wanted temperature to avoid trigger/alert conditions around it.

For every sensor, there are 3 independent ways of alert for alarm condition – e-mail, SNMP trap and HTTP post of an XML/JSON file. Each alarm notification method is activated by check box.

Globally for all sensors, there are checkbox “Return notification”. If this option is chosen there will be notification also when parameter returns in range.

Globally for all sensors, there are “Notification delay” parameter. It is very useful like a filter for short alarm conditions.

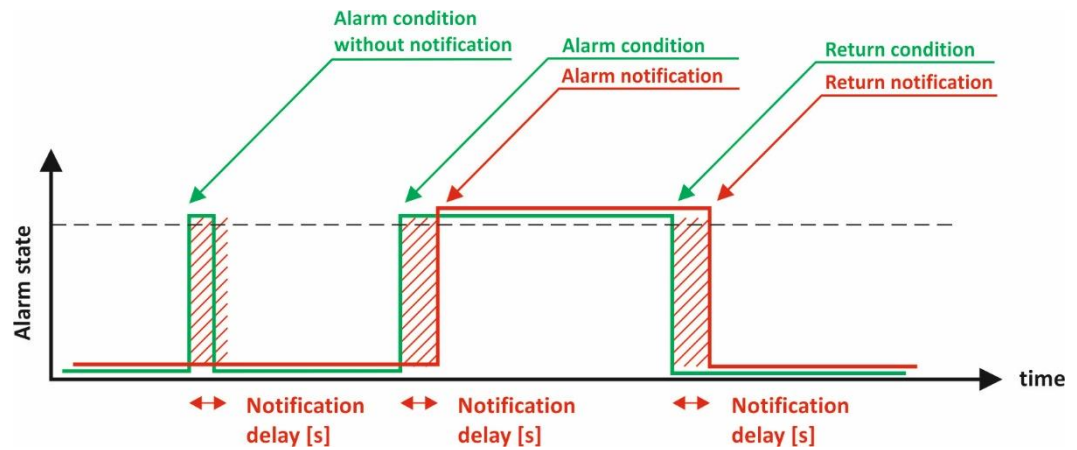

7.2.4. System

On this page, some general settings can be made.

7.1.1.1. General

The system name, location, and contact can be used for automatic identification of device via M2M protocols.

General	
System name	<input type="text" value="Name"/>
System location	<input type="text" value="Location"/>
System contact	<input type="text" value="info@teracom.cc"/>

7.1.1.2. WEB access

In this section, WEB access authentication can be deactivated. By default, it is activated with admin/admin authentication details.

HTTP port for WEB access can be changed. This is useful for some routers which don't support different outside/inside ports for port forwarding. By default, HTTP port is 80.

Web access	
Authentication	<input type="text" value="Enabled"/>
HTTP port	<input type="text" value="80"/>

7.1.1.3. HTTP API

In this section, HTTP API access authentication can be activated/deactivated. By default it is active.

HTTP API	
Authentication	<input type="text" value="Enabled"/>

Authentication details are same for WEB access. The controller support two types of authentication – see the explanation for HTTP API below.

7.1.1.4. Monitoring page automatic refresh

Monitoring page refresh interval can be set between 0 and 253 seconds. Zero means no automatic refresh.

Monitoring page automatic refresh	
Interval (seconds)	<input type="text" value="1"/> (0-253)

7.1.1.5. Display

The unit for observed temperatures can be selected between Celsius and Fahrenheit temperature scales.

Display	
Temperature units	<input type="text" value="Celsius"/>

7.2.5. NTP

Internal RTC (Real Time clock) of the controller can be set either manually or automatically.

Time setup	
Time configuration	NTP server ▼
NTP server IP/URL	pool.ntp.org
Time zone	+3.00
Interval (h)	12
If not found (h)	1
Set time	16.12.2016,10:10:38
Uptime	
Uptime	0days,00:04:10
SAVE	

Current time	16.12.2016,10:10:40
Last updated	16.12.2016,10:06:32
Status	OK
Delay (ms)	8.1mS
Stratum	3

For automatic clock synchronization, the controller supports NTP (Network Time Protocol) and all necessary parameters for automatic synchronization are available in this section.

By default, NTP synchronization is enabled, server – pool.ntp.org, Time zone +2 and interval of 12 hours.

7.3. Services

7.3.1. Modbus

TCW210-TH supports Modbus TCP/IP.

Modbus setup	
Modbus	Enable
Port	502

By default, Modbus is disabled. Standard port for this protocol is 502.

7.3.2. SNMP

The TCW210-TH supports SNMP v.2.

In this section all necessary parameters for proper operation of SNMP can be set.

SNMP setup							
SNMP	Enable						
SNMP port	161						
Read community	public						
Write community	private						
SNMP traps							
IP	192.168.32.32	Port	162	Community	public	Disable	Test
IP	0.0.0.0	Port	162	Community	public	Disable	Test
IP	0.0.0.0	Port	162	Community	public	Disable	Test
IP	0.0.0.0	Port	162	Community	public	Disable	Test
IP	0.0.0.0	Port	162	Community	public	Disable	Test

By default SNMP is disabled, the port is 161, read community is public and write community is private.

In an alarm condition, SNMP trap can be send up to 5 independent recipients. All they can be with different port and community. There is an independent button for trap test. SNMP traps can be sent if:

- event occurs (status change) on Digital Inputs;
- measured parameter on Analog Inputs goes outside the range;
- measured parameter on 1-Wire/RS-485 bus goes outside the range;
- restart;
- SW reset.

7.3.3. Logger

The TCW210-TH supports logger for all monitored parameters. The records are made in a circular buffer within the internal flash memory. When the buffer is full, the oldest values are overwritten with the newest ones.

7.3.3.1. Logger setup

Logger can be activated in Time, Alarm and Time&Alarm modes. The mode specify when records in logger memory are made.

In time mode records are made periodically on Log interval (in seconds). In alarm mode record are made on every alarm condition. In Time&Alarm mix of both condition for records is used.

Logger setup	
Logger	Enable
Logger mode	Time mode
Log interval (seconds)	30 (10-3600)

7.3.3.2. HTTP Upload Setup

There are two ways to reach the logger records:

- by downloading the full log file with appropriate button;
- by periodical upload the last unsent records.

The screenshot shows the 'HTTP upload setup' configuration window. It includes the following fields and controls:

- HTTP upload:** A dropdown menu set to 'Enable'.
- Server:** A text field containing 'http://192.168.32.30:8181/push_log/HTTP_post.php'.
- Upload interval (h):** A dropdown menu set to '12h'.
- Sync time:** A text field containing '00:00:00'.
- Buttons:** 'Upload test log', 'Force upload', and 'Download full log'.

For upload of .csv file HTTP post is used. The period of upload can be chosen from menu between 1 and 24 hours.

Sync time is a moment in the day when a period of upload is synchronized.

Example:

Current time is 19:31, Upload period is 3 hours and Sync time is 9:00.

The logger synchronization in 9:00 means that time for records will be: 09:00, 12:00, 15:00, 18:00, 21:00, 24:00, 03:00 and 06:00. The first record, after the logger enabling in 19:31 will be in 21:00. This is the first record time in day fitful Sync time.

The button “Force upload” initiates upload recorded information between previous periodical upload and now.

7.3.4. HTTP post

TCW210-TH can periodically upload a file (with the status of monitored parameters) to a dedicated server using HTTP Post. The posting period is between 10 and 3600 seconds.

The file format can be XML or JSON.

The screenshot shows the 'HTTP post setup' configuration window. It includes the following fields and controls:

- HTTP post:** A dropdown menu set to 'Enable'.
- Data format:** A dropdown menu set to 'XML'.
- Server:** A text field containing 'http://192.168.32.30:80/xampp/test/pushtest.php'.
- Period (seconds):** A text field containing '70' with a range '(10-14400)'.
- Connect on any alarm:** An unchecked checkbox.
- Key:** A text field containing '00:00:00:00:22'.
- Process answer:** A dropdown menu set to 'Yes'.
- Button:** 'Test HTTP post'.

In addition to the periodical post, a file can be uploaded at any alarm condition. In this case “Connect on any alarm” should be checked.

The “Key” field value is sent in the XML/JSON and can be used for device identification.

If “Process Answer” option is enabled, the TCW210-TH will process the answer of the remote server. List of valid commands are described in section “HTTP API commands”.

7.3.5. Cloud

ThingSpeak server is an open data platform and API for the Internet of Things that enables you to collect, store, analyze, visualize, and act on data from sensors.

The primary element of ThingSpeak activity is the channel, which contains API key, channel ID and eight data fields.

TCW210-TH has four channel sections – Channel 1, Channel 2, Channel 3 and Channel 4.

ThingSpeak setup	
Enable ThingSpeak	<input type="checkbox"/>
Connect on any alarm	<input type="checkbox"/>
Period (sec)	<input type="text" value="300"/>
Link	<input type="text"/>
Channel 1	
Enable	<input type="checkbox"/>
API key	<input type="text"/>
Channel ID	<input type="text" value="1"/>
Field 1	<input type="text" value="S1:TST1xx Temperature"/>
Field 2	<input type="text" value="S2:TSH2xx Temperature"/>
Field 3	<input type="text" value="S2:TSH2xx Temperature"/>
Field 4	<input type="text" value="S4:TST3xx Temperature"/>
Field 5	<input type="text" value="S5:TST3xx Temperature"/>
Field 6	<input type="text" value="S6:TST3xx Temperature"/>
Field 7	<input type="text" value="S7:TSH3xx Temperature"/>
Field 8	<input type="text" value="none"/>
<input type="button" value="Test"/>	

7.3.6. Dynamic DNS

With dynamic DNS can access TCW210-TH from the public Internet without investing in a broadband account that has a static IP address.

TCW210-TH supports the following DNS services – DynDNS, No-IP and DNS-O-Matric.

Dynamic DNS setup	
Dynamic DNS	<input type="text" value="Enable"/>
Service	<input type="text" value="DynDNS"/>
Hostname	<input type="text" value="tcw210-th.dyndns.org"/>
User	<input type="text" value="teracomtcw"/>
Password	<input type="password" value="*****"/>
Maintainer e-mail	<input type="text" value="teracom_test@yahoo.com"/>
DDNS last status	The service is disabled.

The email is required of some providers for client's identification

7.4. Administration

7.4.1. User/Pass

The TCW210-TH supports two users – “Admin” and “User”.

“Admin” has administrative rights.

“User” shall not modify any settings.

The username and password can be up to 31 characters long.

Admin access	
Username	<input type="text" value="admin"/>
Password	<input type="password"/>
Confirm password	<input type="password"/>
<input type="button" value="SAVE"/>	

User access	
Username	<input type="text" value="user"/>
Password	<input type="password"/>
Confirm password	<input type="password"/>
<input type="button" value="SAVE"/>	

7.4.2. Backup/Restore

TCW210-TH supports backup and restore of all user setting. All settings are saved in XML backup file. This file can be used after this for restore on many devices. This is very useful for multiplying similar settings to a batch of controllers.

Backup/Restore configuration	
Select configuration file	<input type="button" value="Choose File"/> No file chosen
<input type="button" value="RESTORE"/> <input type="button" value="BACKUP"/>	

7.4.3. FW update

The TCW210-TH can be updated via the WEB interface.

Firmware update	
Current FW version	TCW210TH-v1.208
Select FW version	<input type="button" value="Choose File"/> No file chosen
<input type="button" value="UPLOAD"/>	

To update the device follow the steps below:

- Go to www.teracomsystems.com and download the latest firmware;
- From Administration->FW update select downloaded .cod file and press “upload” button;
- After the firmware update is completed, Login page will appear.

Attention! Don’t turn off the power supply during the update. Turning off the power supply will damage the device.

7.5. Logout

The TCW210-TH support multiseession, but the good practice is to log out after finish the work.

8. Protocols and API

8.1. SNMP

Simple Network Management Protocol (SNMP) is a standard internet protocol for managing devices on IP networks. In typical uses of SNMP, one or more administrative computers, called managers, monitor and control devices on LAN. Each controlled device, at all times, executes a software component called an agent which reports information via SNMP to the manager.

The TCW210-TH can be configured and monitored through SNMP.

This could be done using every SNMP v.2 compatible program. Parameters that can be changed, are grouped according to their functions in the tables below. To obtain a valid OID number it is necessary to replace the "x" symbol with "1.3.6.1.4.1.38783".

To save the changes configurationSaved (OID x.2.3.5.0) should be set to "1".

product

OID	Name	Access	Description	Syntax
x.4.1.1.0	name	read-only	Device name	DisplayString
x.4.1.2.0	version	read-only	Firmware version	DisplayString
x.4.1.3.0	date	read-only	Release date	DateAndTime

setup -> network

OID	Name	Access	Description	Syntax
x.4.2.1.1.0	deviceID	read-only	Device ID (default MAC address)	MacAddress
x.4.2.1.2.0	hostName	read-only	Hostname	DisplayString
x.4.2.1.3.0	deviceIP	read-only	Device IP address	IpAddress

setup -> io -> sensorsSetup -> sensor1setup

OID	Name	Access	Description	Syntax
x.4.2.2.1.1.1.0	s1description	read-write	Sensor 1 description	DisplayString
x.4.2.2.1.1.2.1.0	s11MAXInt	read-write	S11 maximum value x1000 in Integer format	Integer32
x.4.2.2.1.1.2.2.0	s11MINInt	read-write	S11 minimum value x1000 in Integer format	Integer32
x.4.2.2.1.1.2.3.0	s11HYSTInt	read-write	S11 hysteresis value x1000 in Integer format	Integer32
x.4.2.2.1.1.3.1.0	s12MAXInt	read-write	S12 maximum value x1000 in Integer format	Integer32
x.4.2.2.1.1.3.2.0	s12MINInt	read-write	S12 minimum value x1000 in Integer format	Integer32
x.4.2.2.1.1.3.3.0	s12HYSTInt	read-write	S12 hysteresis value x1000 in Integer format	Integer32
x.4.2.2.1.1.4.1.0	s13MAXInt	read-write	S13 maximum value x1000 in Integer format	Integer32
x.4.2.2.1.1.4.2.0	s13MINInt	read-write	S13 minimum value x1000 in Integer format	Integer32
x.4.2.2.1.1.4.3.0	s13HYSTInt	read-write	S13 hysteresis value x1000 in Integer format	Integer32

setup -> io -> sensorsSetup -> sensor2setup

OID	Name	Access	Description	Syntax
x.4.2.2.1.2.1.0	s2description	read-write	Sensor2 description	DisplayString
x.4.2.2.1.2.2.1.0	s21MAXInt	read-write	s21 maximum value x1000 in Integer format	Integer32
x.4.2.2.1.2.2.2.0	S21MINInt	read-write	S21 minimum value x1000 in Integer format	Integer32
x.4.2.2.1.2.2.3.0	S21HYSTInt	read-write	S21 hysteresis value x1000 in Integer format	Integer32
x.4.2.2.1.2.3.1.0	S22MAXInt	read-write	S22 maximum value x1000 in Integer format	Integer32
x.4.2.2.1.2.3.2.0	S22MINInt	read-write	S22 minimum value x1000 in Integer format	Integer32
x.4.2.2.1.2.3.3.0	S22HYSTInt	read-write	S22 hysteresis value x1000 in Integer format	Integer32
x.4.2.2.1.2.4.1.0	S23MAXInt	read-write	S23 maximum value x1000 in Integer format	Integer32
x.4.2.2.1.2.4.2.0	S23MINInt	read-write	S23 minimum value x1000 in Integer format	Integer32
x.4.2.2.1.2.4.3.0	S23HYSTInt	read-write	S23 hysteresis value x1000 in Integer format	Integer32

setup -> io -> sensorsSetup -> sensor3setup

OID	Name	Access	Description	Syntax
x.4.2.2.1.3.1.0	S3description	read-write	Sensor 3 description	DisplayString
x.4.2.2.1.3.2.1.0	S31MAXInt	read-write	S31 maximum value x1000 in Integer format	Integer32
x.4.2.2.1.3.2.2.0	S31MINInt	read-write	S31 minimum value x1000 in Integer format	Integer32
x.4.2.2.1.3.2.3.0	S31HYSTInt	read-write	S31 hysteresis value x1000 in Integer format	Integer32
x.4.2.2.1.3.3.1.0	S32MAXInt	read-write	S32 maximum value x1000 in Integer format	Integer32
x.4.2.2.1.3.3.2.0	S32MINInt	read-write	S32 minimum value x1000 in Integer format	Integer32
x.4.2.2.1.3.3.3.0	S32HYSTInt	read-write	S32 hysteresis value x1000 in Integer format	Integer32
x.4.2.2.1.3.4.1.0	S33MAXInt	read-write	S33 maximum value x1000 in Integer format	Integer32
x.4.2.2.1.3.4.2.0	S33MINInt	read-write	S33 minimum value x1000 in Integer format	Integer32
x.4.2.2.1.3.4.3.0	S33HYSTInt	read-write	S33 hysteresis value x1000 in Integer format	Integer32

setup -> io -> sensorsSetup -> sensor4setup

OID	Name	Access	Description	Syntax
x.4.2.2.1.4.1.0	S4description	read-write	Sensor 4 description	DisplayString
x.4.2.2.1.4.2.1.0	S41MAXInt	read-write	S41 maximum value x1000 in Integer format	Integer32
x.4.2.2.1.4.2.2.0	S41MINInt	read-write	S41 minimum value x1000 in Integer format	Integer32
x.4.2.2.1.4.2.3.0	S41HYSTInt	read-write	S41 hysteresis value x1000 in Integer format	Integer32
x.4.2.2.1.4.3.1.0	S42MAXInt	read-write	S42 maximum value x1000 in Integer format	Integer32
x.4.2.2.1.4.3.2.0	S42MINInt	read-write	S42 minimum value x1000 in Integer format	Integer32
x.4.2.2.1.4.3.3.0	S42HYSTInt	read-write	S42 hysteresis value x1000 in Integer format	Integer32
x.4.2.2.1.4.4.1.0	S43MAXInt	read-write	S43 maximum value x1000 in Integer format	Integer32
x.4.2.2.1.4.4.2.0	S43MINInt	read-write	S43 minimum value x1000 in Integer format	Integer32
x.4.2.2.1.4.4.3.0	S43HYSTInt	read-write	S43 hysteresis value x1000 in Integer format	Integer32

setup -> io -> sensorsSetup -> sensor5setup

OID	Name	Access	Description	Syntax
x.4.2.2.1.5.1.0	S5description	read-write	Sensor 5 description	DisplayString
x.4.2.2.1.5.2.1.0	S51MAXInt	read-write	S51 maximum value x1000 in Integer format	Integer32
x.4.2.2.1.5.2.2.0	S51MINInt	read-write	S51 minimum value x1000 in Integer format	Integer32
x.4.2.2.1.5.2.3.0	S51HYSTInt	read-write	S51 hysteresis value x1000 in Integer format	Integer32
x.4.2.2.1.5.3.1.0	S52MAXInt	read-write	S52 maximum value x1000 in Integer format	Integer32
x.4.2.2.1.5.3.2.0	S52MINInt	read-write	S52 minimum value x1000 in Integer format	Integer32
x.4.2.2.1.5.3.3.0	S52HYSTInt	read-write	S52 hysteresis value x1000 in Integer format	Integer32
x.4.2.2.1.5.4.1.0	S53MAXInt	read-write	S53 maximum value x1000 in Integer format	Integer32
x.4.2.2.1.5.4.2.0	S53MINInt	read-write	S53 minimum value x1000 in Integer format	Integer32
x.4.2.2.1.5.4.3.0	S53HYSTInt	read-write	S53 hysteresis value x1000 in Integer format	Integer32

setup -> io -> sensorsSetup -> sensor6setup

OID	Name	Access	Description	Syntax
x.4.2.2.1.6.1.0	S6description	read-write	Sensor 6 description	DisplayString
x.4.2.2.1.6.2.1.0	S61MAXInt	read-write	S61 maximum value x1000 in Integer format	Integer32
x.4.2.2.1.6.2.2.0	S61MINInt	read-write	S61 minimum value x1000 in Integer format	Integer32
x.4.2.2.1.6.2.3.0	S61HYSTInt	read-write	S61 hysteresis value x1000 in Integer format	Integer32
x.4.2.2.1.6.3.1.0	S62MAXInt	read-write	S62 maximum value x1000 in Integer format	Integer32
x.4.2.2.1.6.3.2.0	S62MINInt	read-write	S62 minimum value x1000 in Integer format	Integer32
x.4.2.2.1.6.3.3.0	S62HYSTInt	read-write	S62 hysteresis value x1000 in Integer format	Integer32
x.4.2.2.1.6.4.1.0	S63MAXInt	read-write	S63 maximum value x1000 in Integer format	Integer32
x.4.2.2.1.6.4.2.0	S63MINInt	read-write	S63 minimum value x1000 in Integer format	Integer32
x.4.2.2.1.6.4.3.0	S63HYSTInt	read-write	S63 hysteresis value x1000 in Integer format	Integer32

setup -> io -> sensorsSetup -> sensor7setup

OID	Name	Access	Description	Syntax
x.4.2.2.1.7.1.0	S7description	read-write	Sensor 7 description	DisplayString
x.4.2.2.1.7.2.1.0	S71MAXInt	read-write	S71 maximum value x1000 in Integer format	Integer32
x.4.2.2.1.7.2.2.0	S71MINInt	read-write	S71 minimum value x1000 in Integer format	Integer32
x.4.2.2.1.7.2.3.0	S71HYSTInt	read-write	S71 hysteresis value x1000 in Integer format	Integer32

x.4.2.2.1.7.3.1.0	S72MAXInt	read-write	S72 maximum value x1000 in Integer format	Integer32
x.4.2.2.1.7.3.2.0	S72MINInt	read-write	S72 minimum value x1000 in Integer format	Integer32
x.4.2.2.1.7.3.3.0	S72HYSTInt	read-write	S72 hysteresis value x1000 in Integer format	Integer32
x.4.2.2.1.7.4.1.0	S73MAXInt	read-write	S73 maximum value x1000 in Integer format	Integer32
x.4.2.2.1.7.4.2.0	S73MINInt	read-write	S73 minimum value x1000 in Integer format	Integer32
x.4.2.2.1.7.4.3.0	S73HYSTInt	read-write	S73 hysteresis value x1000 in Integer format	Integer32

setup -> io -> sensorsSetup -> sensor8setup

OID	Name	Access	Description	Syntax
x.4.2.2.1.8.1.0	S8description	read-write	Sensor 8 description	DisplayString
x.4.2.2.1.8.2.1.0	S81MAXx10Int	read-write	S81 maximum value x1000 in Integer format	Integer32
x.4.2.2.1.8.2.2.0	S81MINx10Int	read-write	S81 minimum value x1000 in Integer format	Integer32
x.4.2.2.1.8.2.3.0	S81HYSTx10Int	read-write	S81 hysteresis value x1000 in Integer format	Integer32
x.4.2.2.1.8.3.1.0	S82MAXx10Int	read-write	S82 maximum value x1000 in Integer format	Integer32
x.4.2.2.1.8.3.2.0	S82MINx10Int	read-write	S82 minimum value x1000 in Integer format	Integer32
x.4.2.2.1.8.3.3.0	S82HYSTx10Int	read-write	S82 hysteresis value x1000 in Integer format	Integer32
x.4.2.2.1.8.4.1.0	S83MAXx10Int	read-write	S83 maximum value x1000 in Integer format	Integer32
x.4.2.2.1.8.4.2.0	S83MINx10Int	read-write	S83 minimum value x1000 in Integer format	Integer32
x.4.2.2.1.8.4.3.0	S83HYSTx10Int	read-write	S83 hysteresis value x1000 in Integer format	Integer32

monitorNcontrol -> sensors -> sensor1

OID	Name	Access	Description	Syntax
x.4.3.1.1.1.0	s11Int	read-only	S11 value x1000 in Integer format	Integer32
x.4.3.1.1.2.0	s12Int	read-only	S12 value x1000 in Integer format	Integer32
x.4.3.1.1.3.0	s13Int	read-only	S13 value x1000 in Integer format	Integer32
x.4.3.1.1.4.0	s1ID	read-only	S1 ID value	OCTET STRING (SIZE (16))

monitorNcontrol -> sensors -> sensor2

OID	Name	Access	Description	Syntax
x.4.3.1.2.1.0	s21Int	read-only	S21 value x1000 in Integer format	Integer32
x.4.3.1.2.2.0	s22Int	read-only	S22 value x1000 in Integer format	Integer32
x.4.3.1.2.3.0	s23Int	read-only	S23 value x1000 in Integer format	Integer32
x.4.3.1.2.4.0	s2ID	read-only	S2 ID value	OCTET STRING (SIZE (16))

monitorNcontrol -> sensors -> sensor3

OID	Name	Access	Description	Syntax
x.4.3.1.3.1.0	s31Int	read-only	S31 value x1000 in Integer format	Integer32
x.4.3.1.3.2.0	s32Int	read-only	S32 value x1000 in Integer format	Integer32
x.4.3.1.3.3.0	s3ID	read-only	S3 ID value	OCTET STRING (SIZE (16))

monitorNcontrol -> sensors -> sensor4

OID	Name	Access	Description	Syntax
x.4.3.1.4.1.0	s41Int	read-only	S41 value x1000 in Integer format	Integer32
x.4.3.1.4.2.0	s42Int	read-only	S42 value x1000 in Integer format	Integer32
x.4.3.1.4.3.0	s43Int	read-only	S43 value x1000 in Integer format	Integer32
x.4.3.1.4.3.0	s4ID	read-only	S4 ID value	OCTET STRING (SIZE (16))

monitorNcontrol -> sensors -> sensor5

OID	Name	Access	Description	Syntax
x.4.3.1.5.1.0	s51Int	read-only	S51 value x1000 in Integer format	Integer32
x.4.3.1.5.2.0	s52Int	read-only	S52 value x1000 in Integer format	Integer32
x.4.3.1.5.3.0	s53Int	read-only	S53 value x1000 in Integer format	Integer32
x.4.3.1.5.4.0	s5ID	read-only	S5 ID value	OCTET STRING (SIZE (16))

monitorNcontrol -> sensors -> sensor6

OID	Name	Access	Description	Syntax
x.4.3.1.6.1.0	s61Int	read-only	S61 value x1000 in Integer format	Integer32
x.4.3.1.6.2.0	s62Int	read-only	S62 value x1000 in Integer format	Integer32
x.4.3.1.6.3.0	s63Int	read-only	S63 value x1000 in Integer format	Integer32
x.4.3.1.6.4.0	s6ID	read-only	S6 ID value	OCTET STRING (SIZE (16))

monitorNcontrol -> sensors -> sensor7

OID	Name	Access	Description	Syntax
x.4.3.1.7.1.0	s71Int	read-only	S71 value x1000 in Integer format	Integer32
x.4.3.1.7.2.0	s72Int	read-only	S72 value x1000 in Integer format	Integer32
x.4.3.1.7.3.0	s73Int	read-only	S73 value x1000 in Integer format	Integer32
x.4.3.1.7.4.0	s7ID	read-only	S7 ID value	OCTET STRING (SIZE (16))

monitorNcontrol -> sensors -> sensor8

OID	Name	Access	Description	Syntax
x.4.3.1.8.1.0	s81Int	read-only	S81 value x1000 in Integer format	Integer32
x.4.3.1.8.2.0	s82Int	read-only	S82 value x1000 in Integer format	Integer32
x.4.3.1.8.3.0	s83Int	read-only	S83 value x1000 in Integer format	Integer32
x.4.3.1.8.4.0	s8ID	read-only	S8 ID value	OCTET STRING (SIZE (16))

monitorNcontrol

OID	Name	Access	Description	Syntax
x.4.3.5.0	configurationSaved	read-write	Configuration save status SAVED/UNSAVED	INTEGER { unsaved(0), saved(1) }
x.4.3.6.0	restartDevice	read-write	Restart Device	INTEGER { cancel(0), restart(1) }
x.4.3.7.0	temperatureUnit	read-only	Unit of the all temperature values	INTEGER { celcius(0), fahrenheit(1) }
x.4.3.8.0	hardwareErr	read-only	Hardware Error	INTEGER { noErr(0), owErr(1), hwErr(2) }


8.2. HTTP API

8.2.1. HTTP Post

TCW210-TH can execute HTTP Post to upload XML/JSON file to a dedicated server.

This functionality is very useful if the controller is behind the router without public IP address or the user don't have access to router configuration. The server should have a public IP address.

The typical monitoring application is shown on the picture below:

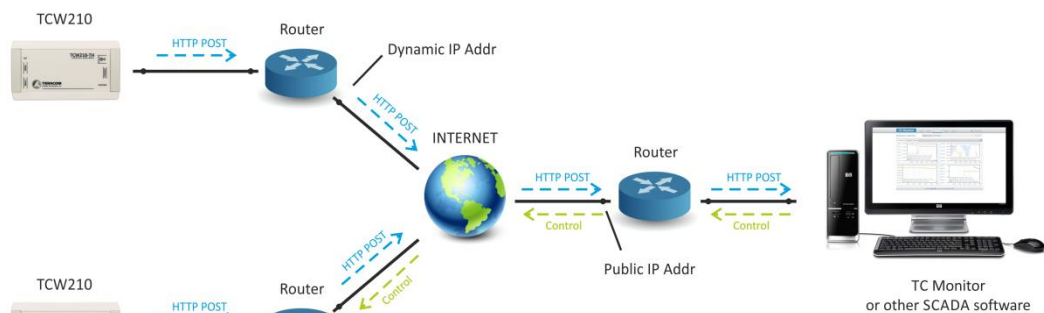

HTTP post can be sent periodically or periodically plus on an alarm condition.

To test HTTP Post follow the steps below:

- Save following code like post.php:

```

<?php
    define("FILENAME", 'status.xml');
    define("FOLDER", "");
    define("SEPARATOR", "");
    define("STR_SUCCESS", 'set FIN');
    define("STR_ERROR", 'error');

    if($_SERVER['REQUEST_METHOD'] == 'POST'){
        $datePrefix = date('YmdHis', strtotime('now'));
        $pathname = FOLDER.SEPARATOR.$datePrefix.'_' . FILENAME;
        $postdata = file_get_contents("php://input");
        $handle = fopen($pathname, 'w+');
        $content = var_export($postdata, true);
        fwrite($handle, substr($content, 1, strlen($content)-2));
        fclose($handle);
        echo (($handle === false) ? STR_ERROR : STR_SUCCESS)."\r\n";
    }
    else {
        echo "The PHP script is working!";
    }
?>

```

- Copy the post.php file on a public web server with PHP support. To verify that the script is working properly, you can type the URL (for example www.yourserverURL.com/post.php) in your web browser. If all is OK, a web page with “The PHP script is working!” will be shown.
- Set the controller to send HTTP POST to your web server. Enter the address (yourserverURL.com/post.php) in the URL field. Click on “Test HTTP Post” button.
- If the HTTP POST is received and processed, “OK” will be shown close to the button. Along with this, a XML file will be created in the same directory, where post.php is located. The file name will contain time information and looks as 20151120103318_status.xml.

8.2.2. HTTP Get

HTTP Get can be used to monitor TCW210-TH via XML or JSON files. The format is as follows:

<http://device.ip.address/status.xml>

<http://device.ip.address/status.json>

See sections **8.2.4 XML file structure** and **8.2.5 JSON file structure** for details of files.

The device supports basic access authentication. This should be count if HTTP API authentication is enabled.

HTTP Get can be sent in any time to TCW210-TH if it is in same network or it has appropriate routing.

If there isn't direct access to device, HTTP Get can be sent immediately after HTTP Post receiving from same device.

8.2.3. XML file structure

```
<Monitor>
  <DeviceInfo>
    <DeviceName>TCW210-TH</DeviceName>
    <HostName>TCW210-TH</HostName>
    <ID>D8-80-39-35-54-EB</ID>
    <FwVer>TCW210-TH-v1.153</FwVer>
    <MnflInfo>www.teracomsystems.com</MnflInfo>
    <SysContact>info@teracomsystems.com</SysContact>
    <SysName>TCW210-TH</SysName>
    <SysLocation>Ruse</SysLocation>
  </DeviceInfo>
  <S>
    <S1>
      <description>S1:TSH2xx</description>
      <id>01D01FB71700FFF8</id>
      <SenType>1Wire</SenType>
      <item1>
        <value>17.4</value>
        <unit>°C</unit>
        <alarm>1</alarm>
        <min>-40.0</min>
        <max>15.0</max>
        <hys>1.0</hys>
      </item1>
      <item2>
        <value>43.4</value>
        <unit>%RH</unit>
        <alarm>1</alarm>
        <min>0.0</min>
        <max>30.0</max>
        <hys>1.0</hys>
      </item2>
      <item3>
        <value>4.8</value>
        <unit>°C</unit>
        <alarm>0</alarm>
        <min>0.0</min>
        <max>25.0</max>
        <hys>2.5</hys>
      </item3>
    </S1>
    <S2>
      <description>S2</description>
      <id>0000000000000000</id>
      <SenType>---</SenType>
      <item1>
        <value>---</value>
        <unit>---</unit>
        <alarm>0</alarm>
        <min>---</min>
        <max>---</max>
        <hys>---</hys>
      </item1>
      <item2>
        <value>---</value>
        <unit>---</unit>
        <alarm>0</alarm>
        <min>---</min>
        <max>---</max>
        <hys>---</hys>
      </item2>
      <item3>
        <value>---</value>
        <unit>---</unit>
        <alarm>0</alarm>
        <min>---</min>
        <max>---</max>
        <hys>---</hys>
      </item3>
    </S2>
    <S3>
      <description>S3:TSH3xx</description>
      <id>1500502CFDFFFFFEC</id>
      <SenType>RS485</SenType>
      <item1>
```

```

        <value>----</value>
        <unit>°C</unit>
        <alarm>0</alarm>
        <min>-40.0</min>
        <max>15.0</max>
        <hys>1.0</hys>
    </item1>
    <item2>
        <value>----</value>
        <unit>%RH</unit>
        <alarm>0</alarm>
        <min>0.0</min>
        <max>100.0</max>
        <hys>1.0</hys>
    </item2>
    <item3>
        <value>----</value>
        <unit>°C</unit>
        <alarm>0</alarm>
        <min>0</min>
        <max>25.0</max>
        <hys>2.5</hys>
    </item3>
</S3>
<S4>
    <description>S4:TST3xx</description>
    <id>33004F0956FFFF58</id>
    <SenType>RS485</SenType>
    <item1>
        <value>17.2</value>
        <unit>°C</unit>
        <alarm>0</alarm>
        <min>-40.0</min>
        <max>85.0</max>
        <hys>1.0</hys>
    </item1>
    <item2>
        <value>----</value>
        <unit>----</unit>
        <alarm>0</alarm>
        <min>----</min>
        <max>----</max>
        <hys>----</hys>
    </item2>
    <item3>
        <value>----</value>
        <unit>----</unit>
        <alarm>0</alarm>
        <min>----</min>
        <max>----</max>
        <hys>----</hys>
    </item3>
</S4>
<S5>
    <description>S5:TST3xx</description>
    <id>33004F0957FFFFF3</id>
    <SenType>RS485</SenType>
    <item1>
        <value>17.6</value>
        <unit>°C</unit>
        <alarm>0</alarm>
        <min>-40.0</min>
        <max>85.0</max>
        <hys>1.0</hys>
    </item1>
    <item2>
        <value>----</value>
        <unit>----</unit>
        <alarm>0</alarm>
        <min>----</min>
        <max>----</max>
        <hys>----</hys>
    </item2>
    <item3>
        <value>----</value>
        <unit>----</unit>
        <alarm>0</alarm>

```

```

        <min>---</min>
        <max>---</max>
        <hys>---</hys>
    </item3>
</S5>
<S6>
    <description>S6:TST3xx</description>
    <id>33004F0958FFFFAC</id>
    <SenType>RS485</SenType>
    <item1>
        <value>17.6</value>
        <unit>°C</unit>
        <alarm>0</alarm>
        <min>-40.0</min>
        <max>85.0</max>
        <hys>1.0</hys>
    </item1>
    <item2>
        <value>---</value>
        <unit>---</unit>
        <alarm>0</alarm>
        <min>---</min>
        <max>---</max>
        <hys>---</hys>
    </item2>
    <item3>
        <value>---</value>
        <unit>---</unit>
        <alarm>0</alarm>
        <min>---</min>
        <max>---</max>
        <hys>---</hys>
    </item3>
</S6>
<S7>
    <description>S7:TST3xx</description>
    <id>33004F0959FFFF07</id>
    <SenType>RS485</SenType>
    <item1>
        <value>17.2</value>
        <unit>°C</unit>
        <alarm>0</alarm>
        <min>-40.0</min>
        <max>85.0</max>
        <hys>1.0</hys>
    </item1>
    <item2>
        <value>---</value>
        <unit>---</unit>
        <alarm>0</alarm>
        <min>---</min>
        <max>---</max>
        <hys>---</hys>
    </item2>
    <item3>
        <value>---</value>
        <unit>---</unit>
        <alarm>0</alarm>
        <min>---</min>
        <max>---</max>
        <hys>---</hys>
    </item3>
</S7>
<S8>
    <description>S8</description>
    <id>0000000000000000</id>
    <SenType>---</SenType>
    <item1>
        <value>---</value>
        <unit>---</unit>
        <alarm>0</alarm>
        <min>---</min>
        <max>---</max>
        <hys>---</hys>
    </item1>
    <item2>
        <value>---</value>

```



```

        <unit>---</unit>
        <alarm>0</alarm>
        <min>---</min>
        <max>---</max>
        <hys>---</hys>
    </item2>
    <item3>
        <value>---</value>
        <unit>---</unit>
        <alarm>0</alarm>
        <min>---</min>
        <max>---</max>
        <hys>---</hys>
    </item3>
</S8>
</S>
<HTTPPush>
    <Key>00:00:00:00:22</Key>
    <PushPeriod>300</PushPeriod>
</HTTPPush>
<hwerr/>
<Alarmed>1</Alarmed>
<Scannig/>
<Time>
    <Date>15.12.2016</Date>
    <Time>09:15:31</Time>
</Time>
</Monitor>

```

Where:

<value>---</value> and <unit>---</unit> means no sensor on this position;

<alarm>1</alarm> means there is trigger condition.

8.2.4. JSON file structure

```

{
  "Monitor": {
    "DeviceInfo": {
      "DeviceName": "TCW210-TH",
      "HostName": "TCW210-TH",
      "ID": "D8:80:39:8E:34:23",
      "FwVer": "TCW210-TH-v1.153",
      "MnflInfo": "www.teracomsystems.com",
      "SysContact": "info@teracomsystems.com",
      "SysName": "TCW210-TH",
      "SysLocation": "Ruse"
    },
    "S": {
      "S1": {
        "description": "S1:TSH2xx",
        "id": "01D01FB71700FF8",
        "SenType": "1Wire",
        "item1": {
          "value": "17.4",
          "unit": "°C",
          "alarm": "1",
          "min": "-40.0",
          "max": "15.0",
          "hys": "1.0"
        },
        "item2": {
          "value": "43.4",
          "unit": "%RH",
          "alarm": "1",
          "min": "0.0",
          "max": "30.0",
          "hys": "1.0"
        },
        "item3": {
          "value": "4.8",
          "unit": "°C",
          "alarm": "0",
          "min": "0.0",
          "max": "25.0",
          "hys": "2.5"
        }
      }
    }
  }
}

```

```

},
"S2": {
  "description": "S2",
  "id": "0000000000000000",
  "SenType": "---",
  "item1": {
    "value": "---",
    "unit": "---",
    "alarm": "0",
    "min": "---",
    "max": "---",
    "hys": "---"
  },
  "item2": {
    "value": "---",
    "unit": "---",
    "alarm": "0",
    "min": "---",
    "max": "---",
    "hys": "---"
  },
  "item3": {
    "value": "---",
    "unit": "---",
    "alarm": "0",
    "min": "---",
    "max": "---",
    "hys": "---"
  }
},
"S3": {
  "description": "S3:TSH3xx",
  "id": "1500502CFDFFFEFC",
  "SenType": "RS485",
  "item1": {
    "value": "---",
    "unit": "°C",
    "alarm": "0",
    "min": "-40.0",
    "max": "15.0",
    "hys": "1.0"
  },
  "item2": {
    "value": "---",
    "unit": "%RH",
    "alarm": "0",
    "min": "0.0",
    "max": "100.0",
    "hys": "1.0"
  },
  "item3": {
    "value": "---",
    "unit": "°C",
    "alarm": "0",
    "min": "0.0",
    "max": "25.0",
    "hys": "2.5"
  }
},
"S4": {
  "description": "S4:TST3xx",
  "id": "33004F0956FFFF58",
  "SenType": "RS485",
  "item1": {
    "value": "17.2",
    "unit": "°C",
    "alarm": "0",
    "min": "-40.0",
    "max": "85.0",
    "hys": "1.0"
  },
  "item2": {
    "value": "---",
    "unit": "---",
    "alarm": "0",
    "min": "---",
    "max": "---",
  }
}

```

```

        "hys": "---"
    },
    "item3": {
        "value": "---",
        "unit": "---",
        "alarm": "0",
        "min": "---",
        "max": "---",
        "hys": "---"
    }
},
"S5": {
    "description": "S5:TST3xx",
    "id": "33004F0957FFFFF3",
    "SenType": "RS485",
    "item1": {
        "value": "17.6",
        "unit": "°C",
        "alarm": "0",
        "min": "-40.0",
        "max": "85.0",
        "hys": "1.0"
    },
    "item2": {
        "value": "---",
        "unit": "---",
        "alarm": "0",
        "min": "---",
        "max": "---",
        "hys": "---"
    },
    "item3": {
        "value": "---",
        "unit": "---",
        "alarm": "0",
        "min": "---",
        "max": "---",
        "hys": "---"
    }
},
"S6": {
    "description": "S6:TST3xx",
    "id": "33004F0958FFFFFAC",
    "SenType": "RS485",
    "item1": {
        "value": "17.6",
        "unit": "°C",
        "alarm": "0",
        "min": "-40.0",
        "max": "85.0",
        "hys": "1.0"
    },
    "item2": {
        "value": "---",
        "unit": "---",
        "alarm": "0",
        "min": "---",
        "max": "---",
        "hys": "---"
    },
    "item3": {
        "value": "---",
        "unit": "---",
        "alarm": "0",
        "min": "---",
        "max": "---",
        "hys": "---"
    }
},
"S7": {
    "description": "S7:TST3xx",
    "id": "33004F0959FFFFF07",
    "SenType": "RS485",
    "item1": {
        "value": "17.2",
        "unit": "°C",
        "alarm": "0",

```

```

        "min": "-40.0",
        "max": "85.0",
        "hys": "1.0"
    },
    "item2": {
        "value": "---",
        "unit": "---",
        "alarm": "0",
        "min": "---",
        "max": "---",
        "hys": "---"
    },
    "item3": {
        "value": "---",
        "unit": "---",
        "alarm": "0",
        "min": "---",
        "max": "---",
        "hys": "---"
    }
},
"S8": {
    "description": "S8",
    "id": "0000000000000000",
    "SenType": "---",
    "item1": {
        "value": "---",
        "unit": "---",
        "alarm": "0",
        "min": "---",
        "max": "---",
        "hys": "---"
    },
    "item2": {
        "value": "---",
        "unit": "---",
        "alarm": "0",
        "min": "---",
        "max": "---",
        "hys": "---"
    },
    "item3": {
        "value": "---",
        "unit": "---",
        "alarm": "0",
        "min": "---",
        "max": "---",
        "hys": "---"
    }
}
},
"HTTPPush": {
    "Key": "00:00:00:00:00:22",
    "PushPeriod": "70"
},
"hwerr": "",
"Alarmed": "1",
"Scannig": "",
"Time": {
    "Date": "15.12.2016",
    "Time": "08:59:18"
}
}
}

```


01 Illegal function

The function code received in the query is not an allowable action for the controller.

02 Illegal data address

The data address received in the query is not an allowable address for the slave. More specifically, the combination of reference number and transfer length is invalid. For a controller with 100 registers, a request with offset 96 and length 4 would succeed, a request with offset 96 and length 5 will generate exception 02.

8.3.2. Address table

Parameter	FC	Address (Decimal)	Data size
Number of installed sensors	03	99	16-bit Integer
Read Sensor 11	03	100	32-bit Float
Read Sensor 12	03	102	32-bit Float
Read Sensor 21	03	104	32-bit Float
Read Sensor 22	03	106	32-bit Float
Read Sensor 31	03	108	32-bit Float
Read Sensor 32	03	110	32-bit Float
Read Sensor 41	03	112	32-bit Float
Read Sensor 42	03	114	32-bit Float
Read Sensor 51	03	116	32-bit Float
Read Sensor 52	03	118	32-bit Float
Read Sensor 61	03	120	32-bit Float
Read Sensor 62	03	122	32-bit Float
Read Sensor 71	03	124	32-bit Float
Read Sensor 72	03	126	32-bit Float
Read Sensor 81	03	128	32-bit Float
Read Sensor 82	03	130	32-bit Float

Sensor 1 Description	03	5400	64 bytes UTF-8
Sensor 2 Description	03	5432	64 bytes UTF-8
Sensor 3 Description	03	5464	64 bytes UTF-8
Sensor 4 Description	03	5496	64 bytes UTF-8
Sensor 5 Description	03	5528	64 bytes UTF-8
Sensor 6 Description	03	5560	64 bytes UTF-8
Sensor 7 Description	03	5592	64 bytes UTF-8
Sensor 8 Description	03	5624	64 bytes UTF-8

Sensor 11 Dimension	03	9800	64 bytes UTF-8
Sensor 12 Dimension	03	9832	64 bytes UTF-8
Sensor 21 Dimension	03	9864	64 bytes UTF-8
Sensor 22 Dimension	03	9896	64 bytes UTF-8
Sensor 31 Dimension	03	9928	64 bytes UTF-8
Sensor 32 Dimension	03	9960	64 bytes UTF-8
Sensor 41 Dimension	03	9992	64 bytes UTF-8
Sensor 42 Dimension	03	10024	64 bytes UTF-8

Sensor 51 Dimension	03	10056	64 bytes UTF-8
Sensor 52 Dimension	03	10088	64 bytes UTF-8
Sensor 61 Dimension	03	10120	64 bytes UTF-8
Sensor 62 Dimension	03	10152	64 bytes UTF-8
Sensor 71 Dimension	03	10184	64 bytes UTF-8
Sensor 72 Dimension	03	10216	64 bytes UTF-8
Sensor 81 Dimension	03	10248	64 bytes UTF-8
Sensor 82 Dimension	03	10280	64 bytes UTF-8

8.4. Logger

Logger utilizes circular buffer in FLASH memory. When it is full, the new data overwrites the oldest one. In this manner FLASH memory stores full log all the time. There isn't a command to clear the log. Copy of full log is always available for download.

The number of records depends of how long descriptions and what kind of characters are used. In worst case (15 bytes description with characters from the highest part of UTF-8) number of records are about 52000. This number is enough for 36 days with records on every 1 minute.

The new data can be periodically uploaded as a file to dedicated HTTP server in time intervals – 1, 2, 3, 4, 6, 8, 12 and 24 hours. The data is sent in CSV format. Semicolon is used for delimiter.

The first row of log file is always header. All rows, including the header start with record ID and time stamp.

Structure of one row (record) of log is as follows:

ID	Time	Type of record	Inputs value	Relays	Alarm conditions
----	------	----------------	--------------	--------	------------------

ID	32-bit unique number for every row (record).
Time	time stamp of record, in format yyyy.mm.dd, hh:mm:ss.
Type of record	following types of records are available: "Time" for periodical record; "Event" for record initiate by alarm condition; "Type" for header record; "Start" after power-up condition; "Restart" after reset condition; "Power Down" after power-down condition; "Bad" for problematic record.
Inputs value	in orders – sensors, analog inputs and digital inputs.
Relays	relays conditions.
Alarm conditions	show condition for every input, "1" means active alarm.

Example of log file:

```
1131901;15.10.2015,01:02:23;Type;S11/°C;S12;S21/°C;S22;S31/°C;S32;S41/°C;S42;S51/°C;S52;S61/°C;S62;S71/°C;S72;S81/°C;S82;A1/V;A2/V;D1;D2;R1;R2;S11/°C;S12;S21/°C;S22;S31/°C;S32;S41/°C;S42;S51/°C;S52;S61/°C;S62;S71/°C;S72;S81/°C;S82;A1/V;A2/V;D1;D2;
1131902;15.10.2015,01:02:23;Time;18.250;;18.375;;18.125;;18.500;;18.188;;18.125;;18.375;;18.375;;11.352;0.065;1;0;1;0;1;1;1;1;1;1;1;1;1;0;1;0;
1131903;15.10.2015,01:02:23;Event;18.250;;18.438;;18.125;;18.500;;18.188;;18.125;;18.313;;18.375;;11.352;0.066;0;1;0;1;1;1;1;1;1;1;1;1;1;1;0;0;1;
1131904;15.10.2015,01:02:24;Time;18.250;;18.438;;18.125;;18.500;;18.188;;18.125;;18.313;;18.375;;11.352;0.066;0;1;0;1;1;1;1;1;1;1;1;1;1;1;1;0;0;1;
1131905;15.10.2015,01:02:25;Time;18.250;;18.375;;18.125;;18.500;;18.188;;18.125;;18.313;;18.375;;11.352;0.066;0;1;0;1;1;1;1;1;1;1;1;1;1;1;1;0;0;1;
1131906;15.10.2015,01:02:26;Time;18.250;;18.375;;18.125;;18.500;;18.188;;18.125;;18.313;;18.313;;11.352;0.066;0;1;0;1;1;1;1;1;1;1;1;1;1;1;1;0;0;1;
1131907;15.10.2015,01:02:27;Time;18.250;;18.375;;18.125;;18.438;;18.188;;18.125;;18.313;;18.313;;11.352;0.066;0;1;0;1;1;1;1;1;1;1;1;1;1;1;1;0;0;1;
1131908;15.10.2015,01:02:27;Event;18.250;;18.375;;18.125;;18.438;;18.188;;18.125;;18.313;;18.313;;2.198;9.092;0;1;0;1;1;1;1;1;1;1;1;1;1;1;0;0;0;1;
```

9. Factory default settings

TCW210-TH can be restored to its original factory default settings in 3 different ways.

9.1. Factory default from WEB interface

If the button “Factory default” from Administration->Backup/Restore is pressed, all parameters return to factory default except Network settings.

9.2. Factory default with reset button

If the reset button is pressed for more than 5 seconds, while the device is working, all Network settings go factory default.

9.3. General factory default with reset button

For factory default reset of all parameters following steps should be executed:

- Press and hold the RESET button, then turn on the power supply;
- Yellow LED shines and red LED blinks about 5 time on a second;
- After about 5 seconds red LED will turn off, button can be released;
- Yellow LED flashes on 1 second and red LED shines – device is in working mode, with factory default settings.



The factory default settings are:

User Name	admin
Password	admin
IP Address	192.168.1.2
Subnet Mask	255.255.255.0
Default Gateway	192.168.1.1
SNMPConfiguration	disabled
readCommunity	public
writeCommunity	private
Analog inputs unit	voltage
Analog inputs multiplier	1.000
Analog inputs ofset	0.000

10. Environment information

This equipment is intended for use in a Pollution Degree 2 environment, at altitudes up to 2000 meters.

When the controller is a part of a system, the other elements of the system shall comply with the EMC requirements and shall be intended for use in the same ambient conditions.

11. Safety

This device must not be used for medical, life-saving purposes or for any purpose where its failure could cause serious injury or the loss of life.

To reduce the risk of fire, only flexible stranded wire, with cross section 0.5mm² or larger for wiring of digital and analog inputs and relay output of the device should be used.

To avoid electric shock and fire hazard, do not expose this product to liquids, rain, or moisture. Objects filled with liquids, such as vases, should not be placed on this device.

There is a risk of overheating (damage) of controller, if recommended free spaces to adjacent devices are not ensured. Joint part with external component shall have space for attachment/removal of the cable after installation.

Teracom does not guarantee successful operation of the product if the product was used under conditions deviating from the product specifications.

To ensure that the device works correctly follow the steps below:

- ensure that the device is installed correctly, refer this user manual;
- log in to the devices via browser program;
- make proper set up;
- install sensor TSH1XX or TST1XX on 1-Wire bus;
- install sensor TSH3XX or TST3XX on RS-485 bus;
- go to “Monitoring page” of WEB interface – proper parameters value should be displayed in the same time flashing “STS” led should indicate the proper operation.

If the equipment is used in a manner not specified by the manufacturer, the protection provided by the equipment may be impaired.

In no event will Teracom Ltd. be responsible or liable for indirect or consequential damages resulting from the use or application of this equipment.

12. Maintenance

Upon completion of any service or repairs to the device or once per year, safety check must be performed to determine that this product is in proper operating condition.

Clean the device only with dry cloth. Do not use a liquid cleaner or an aerosol cleaner. Do not use a magnetic/static cleaning device (dust remover) or any kind of abrasive materials to clean the device.

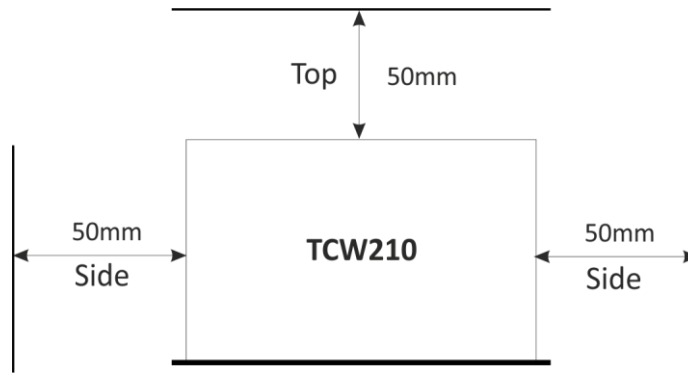


Fig.1